91004 - 4 Function with Mini Transmitter - Narrow Band

91 Series - Relay System

SYSTEM PART NUMBER

91004 4 Function Receiver with Master + 4 Function Narrow Band Mini Transmitter

REPLACEMENT TRANSMITTER

91004TX 4 Function Narrow Band Mini Transmitter

CONTENTS

1 x Receiver

1 x Mini Transmitter

1 x Lanyard

1 x Instructions



NARROW BAND MINI TRANSMITTER SPECIFICATION

SWITCH

Type Rubber membrane with carbon contact

BATTERY

Type 3 Volts (2 x AAA)

CURRENT DRAW

Quiescent 4 micro amps Operating 25 milliamps

PROTECTION

Reverse polarity Protected IP Rating 65
Registration codes Over 16 million

PERFORMANCE

Temp Range -10° C to $+40^{\circ}$ C $(13^{\circ}$ F to $+104^{\circ}$ F)

Range Nominal 150 metres (500 ft) from the Receiver, when driving a momentary output without signal drop out

Transmitted power 10 mW Typical

COMPLIANCE

EMC Exceeds ETSI 300 220. Compliant E11 10R-037601

Modulation FM

Frequency Band 434 MHz Band 15 Frequencies

RECEIVER SPECIFICATION

SWITCH TYPE

Output Switching Relay

SUPPLY VOLTS

Nominal 12/24 Volts DC
Absolute Maximum 40 Volts DC
Minimum 8 Volts DC

Output Switch Supply Internal 12/24 Volts or external up to 80 Volts DC max

(External requires optional connector (see Accessories 9011)

AMPS

Relay Rating 5 Amps System Output Rating 8 Amps

Quiescent Current 25 mA on Standby (Not Set)

Overload Protection None

AERIAL

Internal Antenna Yes Supplied and fitted

External Antenna Optional Receiver <u>must</u> be ordered with SMA connector (see Accessories Part 9010)

OUTPUTS

Master 1 Can be Parallel or Continuous (Not all models – see Build Specification Table)

Functions 4

CONFIGURATION

RS232 Programming Optional Receiver <u>must</u> be ordered with RS232 connector (see Accessories Part 9011) for programming to users'

requirements; interlocks, push/push latch, parallel master inhibit, timeout, channel timeout delay, master output

delay etc.

PERFORMANCE

Simultaneous Outputs Yes With horizontal interlocks (Interlocks are programmable – see CONFIGURATION above)

Instant Tx Response Yes No perceivable delay between TX operation and RX action

DIAGNOSTICS

LED's Yes Confirm 5 Volts, SET, Fault and all Outputs.

PROTECTION

ESR Safety Yes See ESR Safety document.
Back EMF Yes Diode protected on all outputs

Registration codes Yes Over 16 million

STOP Connection Optional External Emergency STOP connector (see Accessories Part No. 9011)

WIRING

Wiring Loom Yes 1.5 metres (5ft) supplied and fitted

Cable Gland Yes Supplied and fitted

Connections Screw terminal into plug and socket on PCB, for easy "swap out"


ENCLOSURE

Weight 0.3 lbs (335gms)
Lid Black PVC
Base Black PVC

Breather Gortex fitted in base Mounting 4 external lugs

Fixings 5mm (3/16") not supplied IP Rating Performs to IP67 standard

(0.5 metre water for 1 hour)

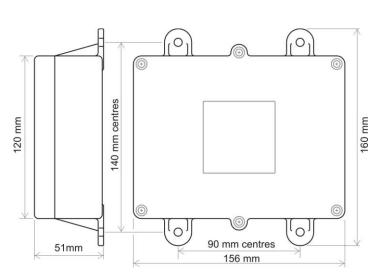

ACCESSORIES 9861, 9862, 9863 and 9869 – External Antenna with cable.

9010 – SMA Connector, for external aerial

9011 – ST, S+ & S- connector and RS232 connector

91 Series				02	04	00	02	04
BUILD SPECIFICATION TABLE FOR MODELS IN THIS RANGE			91 0 00	1 0 C		1 1 0	⊣	⊣
Ide nt	Legend	Connection	6	6	6	6	91	91
X1	+ - F1 F2	Positive, Negative, F1 and F2	S	S	S	S	S	S
X2	F3 F4 M	F3, F4, and Master		М	S		М	S
Х3	ST Vs- Vs+	STOP and Vs- Vs+	0	0	0	0	0	0
X4	ANT	Internal Antenna	S	S	S	S	S	S
X5		SMA (external antenna)	0	0	0	0	0	0
LK1		Master (configuration)		С	С		С	С
LK2		RS232	0	0	0	0	0	0
LK3		RS232	0	0	0	0	0	0
LK4		Safety (parallel master)		С	С		С	С
		1.5 metre (5ft) 4 core cable	S			S		
		1.5 metre (5ft) 7 core cable		S	S		S	S
		9801 Lo-Cover				S	S	S

S = Standard. M = Standard but Master only connected. O = Optional extra. C = Customer configured (see "Factory Settings").

+ Positive 12/24 Volt supply

Negative 0 Volts
 F1, F2, F3, F4
 Outputs F1 to F4
 M
 Master Output

ST STOP - grounding shuts down the Receiver Vs- Vs+ 12/24 Volt supply for control circuits

(used when link is broken to allow switching of DC Voltages outside normal operating limits)

ANT Blade Connector for Internal Antenna

SMA Aerial Connection for External Antenna (Internal Antenna must be removed)

LK1 Master Selection by jumper (AP = Parallel, AM = Continuous)
Factory Settings 418MHz configured Parallel, 433.92MHz configured Continuous

LK2 RS232 for programming

LK3 RS232 for interface with other RS232 modules

LK4 Connected when using Parallel Master, connects safety circuit

Photo of PCB

