

Lodar 92/93 Series Transmitter (shown with LoCover removed)

RESET Button activates the Receiver and the keypad function buttons

STOP Button switches off the Receiver and the keypad function buttons

L.E.D.

Blinks when Transmitter and Receiver are active.



ON when a Transmitter Button is pressed.

Pulses while transmitting when battery is low.



SAFETY FEATURE

The Transmitter automatically transmits a **STOP** signal after 30 minutes; this de-activates the Receiver and the Transmitter keypad.

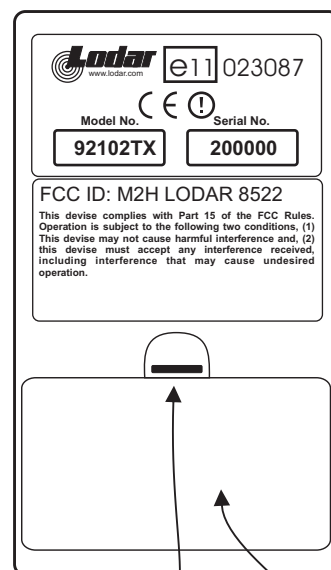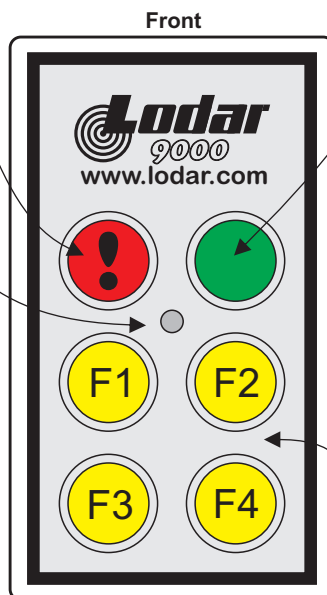

Release Catch

Battery Compartment

Yellow Function Buttons

To register a replacement Lodar Transmitter to a Receiver.

Step 1.

Switch OFF or DISCONNECT the power to the Receiver.

Step 2.

Switch ON or Reconnect the power to the Receiver.

This opens a 20 second registration window in the Receiver.

If you are looking at the Receiver PCB the Fault LED Flashes.


Step 3.

Immediately PRESS and HOLD the Transmitter Green Button for a minimum of 10 seconds during this 20 second window.

When the Transmitter is Registered the Fault LED goes out, and the Set LED comes on.

Your Transmitter is now operating the Receiver.

PRESS & HOLD

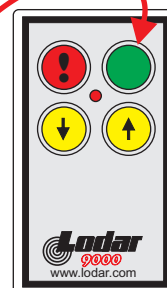

THIS WORKS FOR ALL TRANSMITTERS WITH A **STOP** AND A **RESET** BUTTON

If you have any problems please phone either your local Distributor or Lodar directly
In the UK +44 1922 613633. In the US please phone 1-877- 257-1581.