

4 Function with IP Transmitter – Narrow Band

93 Series - FET System

SYSTEM PART NUMBER

93204 4 Function Receiver with Master + 4 Function IP Narrow Band Transmitter

SPECIAL ORDER

93205 5 Function Receiver no Master + 6 Function IP Narrow Band Transmitter


REPLACEMENT TRANSMITTERS

93204TX 4 Function IP Narrow Band Transmitter

93206TX 6 Function IP Narrow Band Transmitter

CONTENTS

1 x Receiver
1 x IP Transmitter
1 x Lanyard
1 x LoCover
1 x Instructions

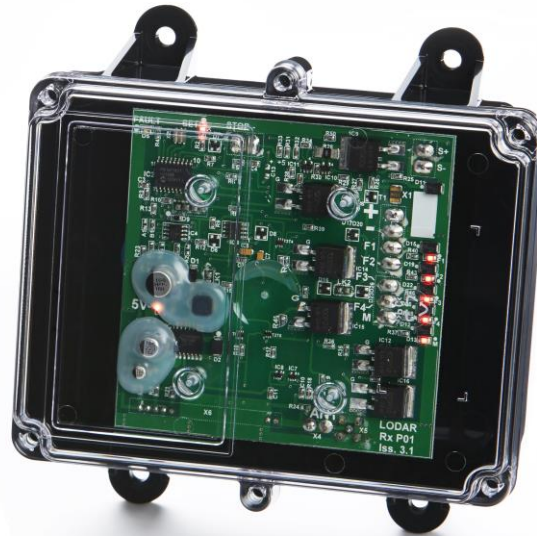

IP TRANSMITTER SPECIFICATION

SWITCH - Type Tactile Dome on PCB Keypad

BATTERY - Type 4 x AAA Alkaline Manganese in holder (6 Volts)

INDICATOR

Type 1 x Red LED
Off Transmitter OFF (The STOP Button has been pressed and released)
Slow flash Transmitter ON and ready for use (The SET Button has been pressed and released)
On Transmitting (A STOP, SET or Function Button is being pressed)
Fast flash Transmitting – Indication that the battery will need replacing soon

CURRENT DRAW

Quiescent 15 micro amps
Operating 24 milliamps

PROTECTION

Reverse polarity Protected
IP Rating 67
Registration codes Over 16 million

PERFORMANCE

Temp Range -10° C to + 40° C (13° F to + 104° F)
Range Nominal as supplied 300 metres (1000 ft) from the Receiver, when driving a momentary output without signal drop out
Transmitted power 10mW Typical

COMPLIANCE

EMC 2004/104/EEC Exceeds ETSI 300 220 Compliant E11 10R-037601
Modulation FM
Frequencies 434 MHz Band, 15 Frequencies

RECEIVER SPECIFICATION

SWITCH TYPE

Output Switching MOS Field Effect Transistor (P Channel Power MOSFET)

SUPPLY VOLTS

Nominal 12/24 Volts DC
 Absolute Maximum 40 Volts DC
 Minimum 8 Volts DC
 Output Switch Supply Internal 12/24 Volts

AMPS

FET Rating 15 Amps
 System Rating 15 Amps
 Quiescent Current 25mA on Standby (Not SET)
 Overload Protection 15 Amps (Auto Shutdown)

AERIAL

Internal Antenna Yes Supplied and fitted
 External Antenna Optional See Accessories.

OUTPUTS

Master 1 Can be Parallel or Continuous. Not all models – see Build Specification Table.
 Function 4/5
 Master (Secondary) 1 Continuous. Not all models, see Build Specification Table.

CONFIGURATION

RS232 Programming to users' requirements Yes Not all models, see Build Specification Table. For programming interlocks, push/push latch, parallel master inhibit, timeout, channel timeout delay, master on delay, radio button de-latching and output allocation.

PERFORMANCE

Simultaneous Outputs Yes With horizontal interlocks (Interlocks are programmable – see CONFIGURATION above)
 Instant TX response Yes No perceivable delay between TX operation and RX action

DIAGNOSTICS

LED's Yes Confirm 5 Volts, SET, Fault and all Outputs.

PROTECTION


ESR Safety Yes See ESR Safety document.
 Back EMF Yes Diode protected on all outputs
 Registration codes Over 16 million
 STOP Connection Yes Internal Emergency Stop Connection, Not all models, see Build Specification Table.

WIRING

Wiring Loom Yes 3 metres (10ft) supplied and fitted
 Cable Gland Yes Supplied and fitted
 Connections Screw terminal into plug and socket on PCB, for easy "swap out"

ENCLOSURE

Weight 0.3 lbs (335gms)
 Lid Clear PVC - to view LEDs
 Base Black PVC
 Breather Gortex fitted in base
 Mounting 4 external lugs
 Fixings 5mm (3/16") not supplied
 IP Rating Performs to IP67 standard
 (0.5 metre water for 1 hour)

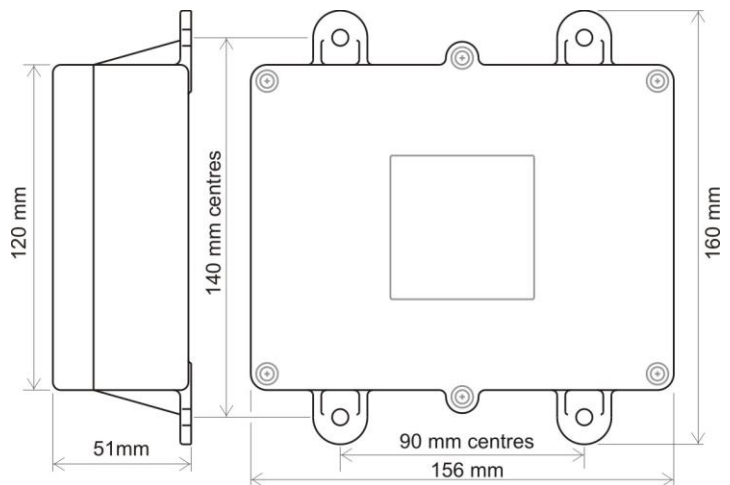

ACCESSORIES

9861, 9862, 9863 and 9869 – External Antenna with cable.


93 Series			93 2 00	93 2 02	93 2 03	93 2 04	93 5 05
BUILD SPECIFICATION TABLE FOR MODELS IN THIS RANGE							
Ident	Legend	Connection					
	+ - F1 F2	Positive, Negative, F1 and F2	S	S	S	S	S
	F3 F4 M	F3, F4, and Master		M	F3	S	S
	ST -	STOP and -		S	S	S	S
	S+ S-	S+ S-		S	S	S	S
	ANT	Internal Antenna	S	S	S	S	S
	SMA	Connector (external antenna)		S	S	S	S
LK1	P	Master - Parallel		C		C	
LK2	C	Master – Continuous		C		C	
LK3	RS232	RS232		S	S	S	S
		3 metres 4 core	S				
		3 metres 7 core		S	S	S	S

S = Standard. M = Standard but Master only connected. C = Customer configured (see "Factory Settings").

+	Positive 12/24 Volt supply
-	Negative 0 Volts
F1, F2, F3 & F4	Outputs to F1 through F4
M	Master Output
STOP -	STOP, when grounded shuts down the Receiver
S+ S-	Master Secondary for Safety solenoid connections etc.
ANT	Blade connector for internal antenna
SMA	Aerial connection for optional external antenna (internal antenna must be removed)
LK1	Jumper fitted to this link for continuous Master
LK2	Jumper fitted to this link for parallel Master
Factory Settings	418MHz configured Parallel, 433.92MHz configured Continuous
LK3	RS232 for interface to access special programmes Also for connection to RS232 modules

Photo of PCB

Connector Side

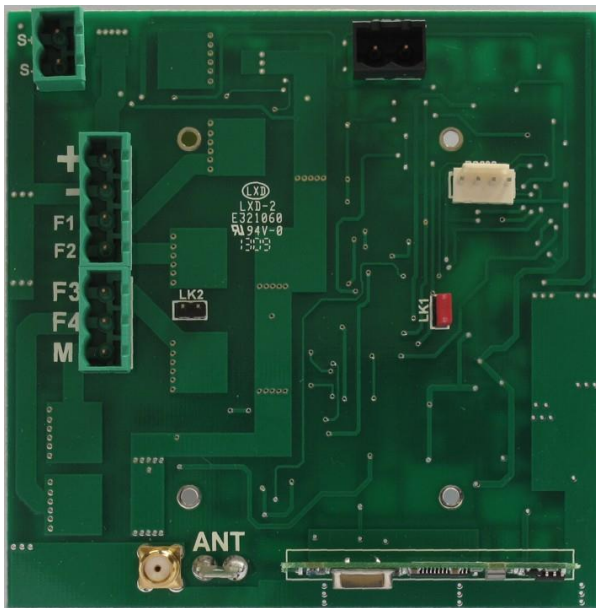

Component Side

